



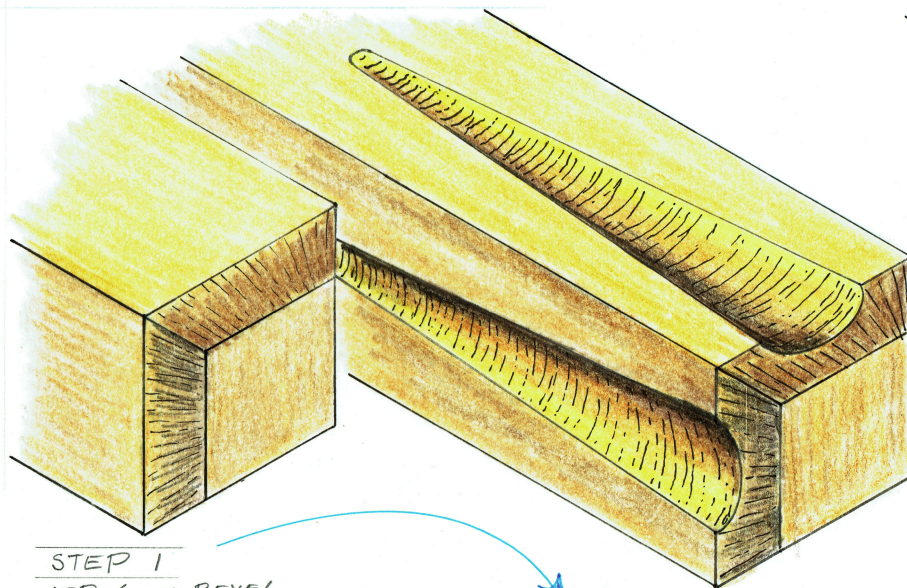


STEP 1
ADD 6mm BEVEL
ALL (4) EDGES

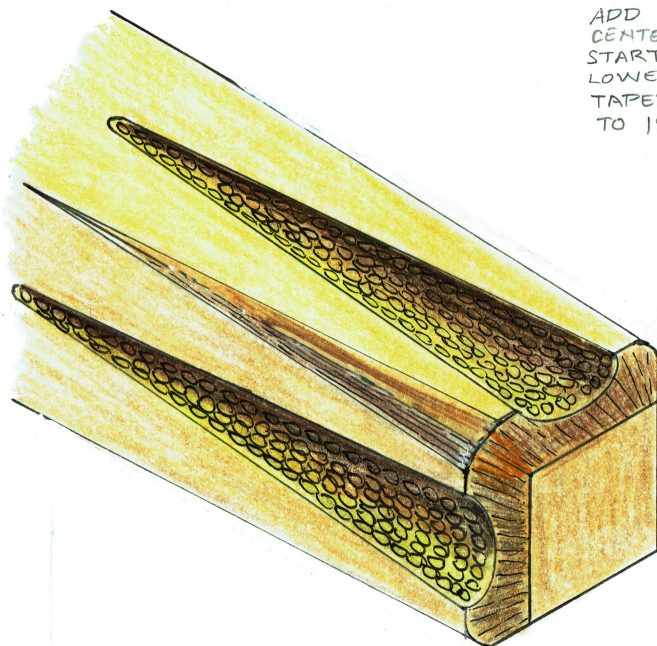

STEP 2
ADD CONCAVE AREA
CENTERED ON ALL (4) FACES
START 36mm BELOW
LOWEST STRUCTURAL ELEMENT
TAPER FROM 0mm DEPTH & WIDTH
TO 18mm WIDE & 4mm DEEP

STEP 3
ROUND & TAPER ALL
(4) OUTSIDE CORNERS

STEP 4
ADD TEXTURE TO
CONCAVE AREAS
WITH NAIL SET

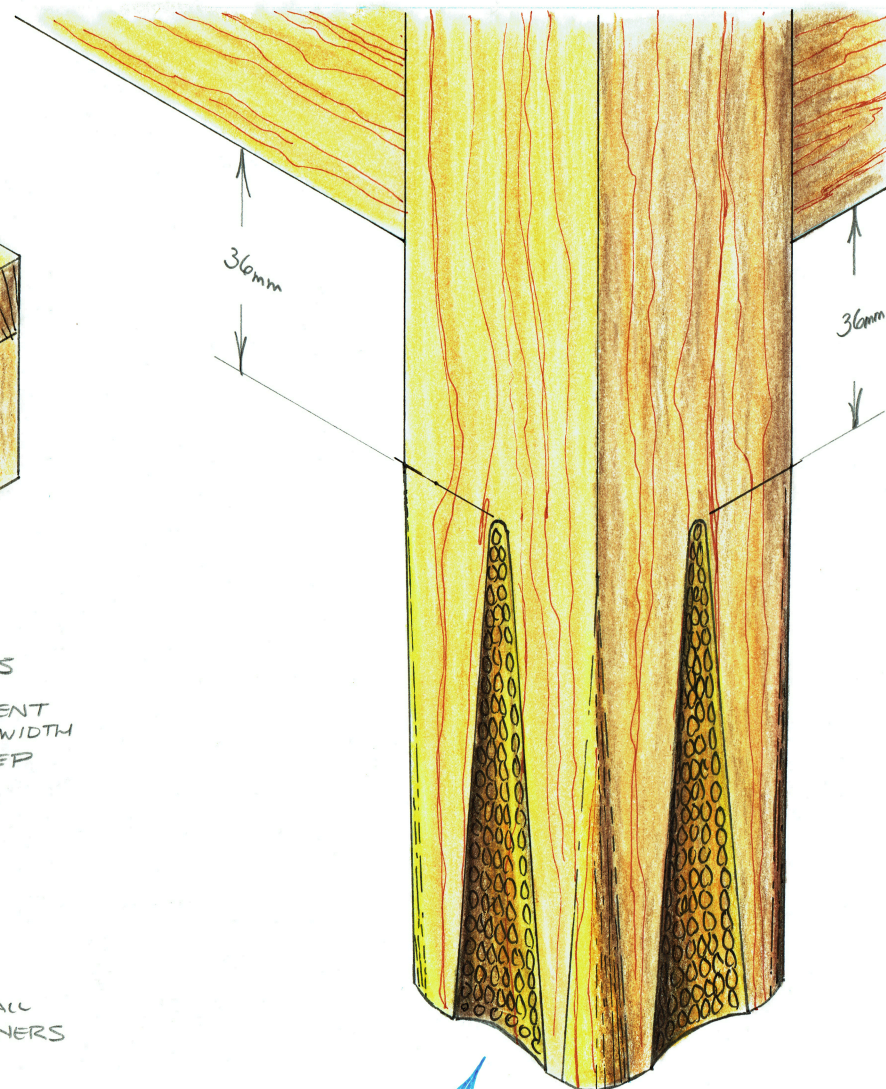

GREGORY MERRITT SEP. 2015
LEG EMBELLISHMENT-000

©GREGORY D. MERRITT 2015